

INSTALLATION INSTRUCTIONS

Quick and Easy Installation Instructions for the SDF Rewards Automated Pass



READ THIS FIRST

You **MUST** correctly install your **Automated Pass** before parking.

- If you have a metalized windshield, please consult your owner's manual/vehicle's authorized service center for mounting instructions or contact the SDF Rewards Administration for additional help.

- If you have another type of tag or pass on your windshield such as a RiverLink, **please contact our office at 877-735-9280 for further instructions.**


PLEASE NOTE: Only the E-ZPass Transponder (hard style case) is accepted for use in the SDF Rewards program.

- Do not wave your **Automated Pass** or hold it inside or outside of your vehicle as you approach the parking gate. Your pass **MUST** be installed horizontally on your windshield to work properly.
- Install your **Automated Pass** when the windshield's temperature is above 50°F. In colder climates, use your heater/defroster to warm the windshield before installing
- Do NOT mount your **Automated Pass** on the mirror or on the visor


Choosing a Location for Your Automated Pass

You should install your **Automated Pass** on the inside of your windshield. **The best location for your Automated Pass is the upper center portion of your windshield, behind the rearview mirror, placed horizontally.** The top of your **Automated Pass** should be at least one inch from the top of the windshield and one inch to the right of the rearview mirror center support. If your windshield has a tint, mount the **Automated Pass, horizontally, below** the tint.


Mirror Mounted to Header

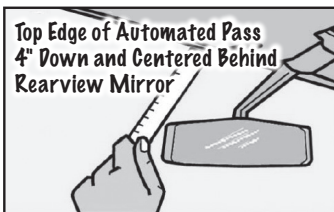

Mirror Mounted to Windshield

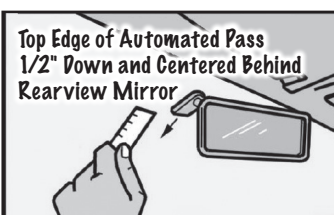

Large Truck, No Rearview Mirror


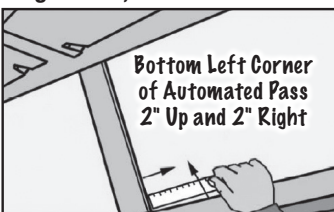


HERE'S WHAT YOU NEED:



Please refer to the detailed instructions that follow to ensure that your **Automated Pass** is properly installed and read at the gate for easy entry and exit.


INSTALLING YOUR AUTOMATED PASS

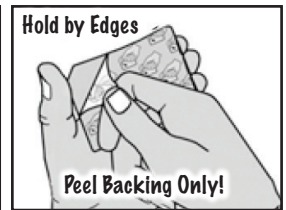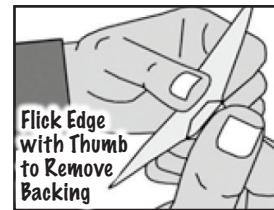

1. **Clean and dry the windshield** where you want to install your **Automated Pass**. You can use any commercial window cleaner.



2. **Peel off backing.**

Note: When you apply the **Automated Pass** to your windshield, be sure to remove all of the air bubbles from under your **Automated Pass** or it may not work as designed.

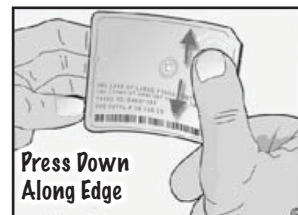

3. **Apply**

- Make sure you have the **Automated Pass** in the right location before touching it to the glass.
- Hold the **Automated Pass** away from the glass with one hand and press one edge to the glass.
- Stick the **Automated Pass** to the glass, horizontally, by rubbing your thumb up and down in a zigzag motion across the entire **Automated Pass** surface.
- Be sure to rub over the **Automated Pass** center chip to remove as much air as possible.
- Step outside your vehicle and look at the **Automated Pass** through the windshield.
- If your **Automated Pass** looks like PHOTO A, with air trapped between the **Automated Pass** and windshield, continue rubbing the **Automated Pass** from the center to the edges to remove trapped air.

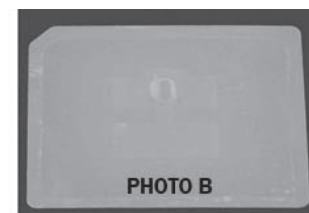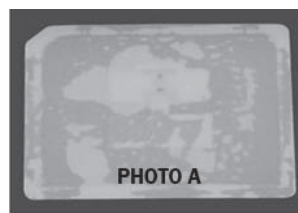

- If your **Automated Pass** looks like PHOTO B, you're done!